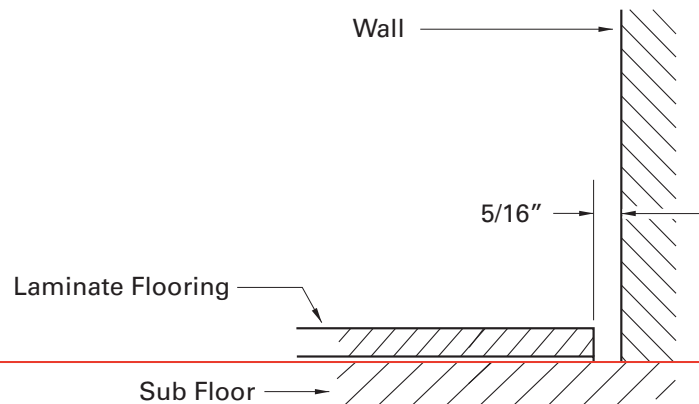
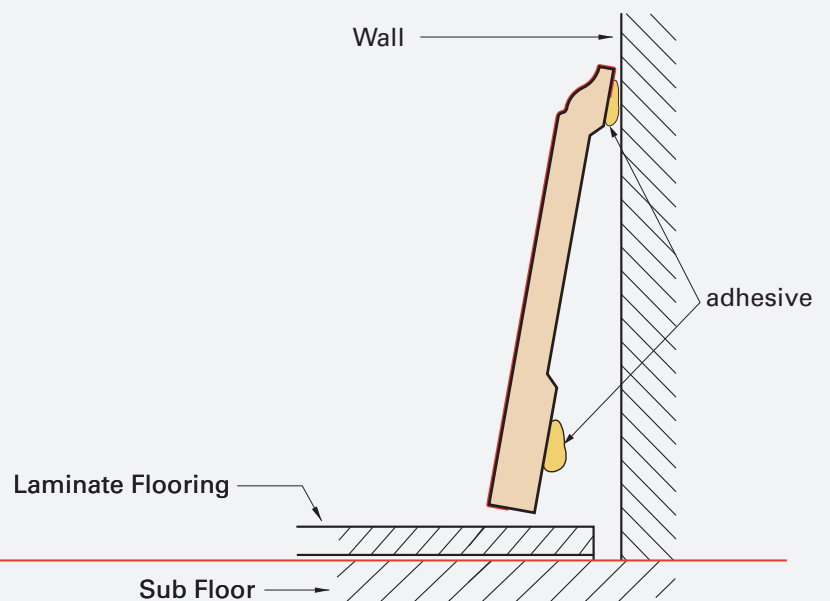


## Colonial Base

Leave a gap between the wall and the floor as suggested by the manufacturer of the floor, but no more than 1/2" to allow the molding to sit on the floor!

**Step 1**

Apply two beads of adhesive on the back side of the molding as shown in the picture and then gently press against the wall and support it with something heavy until it has cured so that it will not pop off the wall.

**Step 2****Quarter Round:**

Apply one thin bead of adhesive to the back of the Quarter Round and attach it to the Colonial Base Molding and support it with a heavy object until the adhesive has cured so it won't pop off the Colonial Base Molding.

**Optional Finishing Nails Installation:**

Use finish nails in the Colonial Base Molding every 16" and also through the Quarter Round and into the Colonial Base Molding. Finish up the nails with a color matching Color Fill.

**Step 3**